


Masking Instructions



- Cut a piece of mask slightly wider than the image to cover

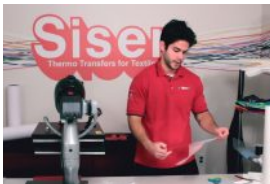

- Remove paper backing and set aside



- Place the mask down on a smooth, firm surface, adhesive side up.
- With the image facing down, center it on the mask, letting the middle drop down on to the adhesive, followed by the rest of the image.



- Place your squeegee at a 45° angle over the center of the image. Using firm pressure, push the squeegee towards the outer edge of the image. This removes any trapped air between the image and the mask. Repeat in several directions.



- Lift a corner of the mask. Use a steady motion to separate the mask from the image.



- Place the transferred image back on the shiny side of the original masking paper that you set aside.

- We recommend using a cold laminator with our mask for large production runs

Watch the how-to TTD Easy Mask video on our youtube channel:
<https://www.youtube.com/watch?v=hUGTzqEnLHc>

Tips:

- Watch our Youtube videos at www.youtube.com/SiserNorthAmerica for other helpful tips
- We Recommend using a cold laminator with our mask for large production runs.
- If you aren't heat applying the product immediately, place the image back on the shiny side of the masking paper.